


Item number: KFT.11.953.30002/B

Revision: 00 • Date: 01 - 2024

PRO side carrier

 ~ 0.75 h.EASY     DIFFICULT

ENGLISH Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.


This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.


These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.


SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION


 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.


 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.


 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG
Ernteweg 7-10
35282 Rauschenberg
Germany



info@sw-motech.com
www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:

www.sw-motech.com



Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.




Tighten/note the tightening torque information:

Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!

<div>4</div> <div>1</div>  <div>KFT.22.892.001.11</div> <div> 3/3</div>	<div>2</div>  <div>M8 x 110; DIN 912 SC.ST.08.110.01.912.088</div> <div> 2/2</div>	<div>3</div>  <div>ø 8,4; DIN 125 US.ST.084.01.125</div> <div> 7/7</div>	<div>4</div>  <div>Ø 22 / ø 8,4 / h 20 DB.ST.0220.0084.0200.02</div> <div> 2/2</div>	<div>5</div>  <div>M8; DIN 985 MU.ST.08.01.985.08</div> <div> 4/4</div>	<div>6</div>  <div>KFT.07.592.003.11</div> <div> 2/2</div>
<div>7</div>  <div>M8 x 80; DIN 7991 SC.ST.08.080.01.7991.088</div> <div> 2/2</div>	<div>8</div>  <div>Ø 14 / ø 8,4 / h 22 DB.ST.140.084.022.01</div> <div> 2/2</div>	<div>9</div>  <div>Ø 25 / ø 8,4 / h 5 DB.00.250.084.005.01</div> <div> 1/1</div>	<div>10</div>  <div>KFT.11.953.001.11</div> <div> 1/1</div>	<div>11</div>  <div>M8 x 20; DIN 912 SC.ST.08.020.01.912.088</div> <div> 1/1</div>	
<div>5</div> <div>12</div>  <div>KFT.11.953.003.11</div> <div> 1/1</div>	<div>13</div>  <div>KFT.11.953.971.01.11</div> <div> 1/1</div>	<div>14</div>  <div>KFT.11.953.972.02.11</div> <div> 1/1</div>	<div>15</div>  <div>KFT.00.152.SV.8</div> <div> 1/1</div>		

1

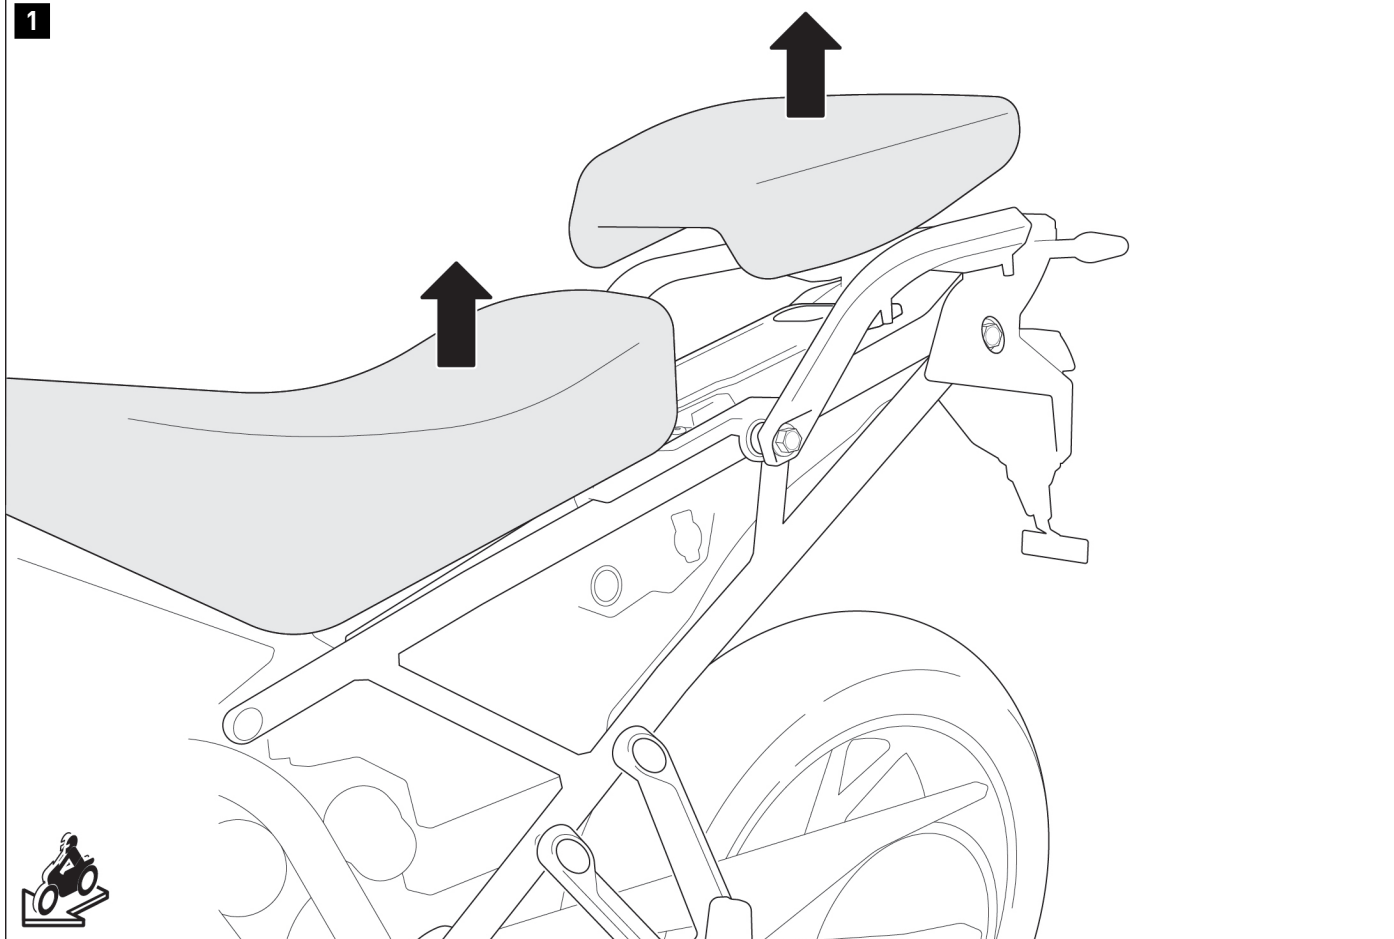


⚠ WARNING: Always wear eye and hand protection!

⚠ WARNING: Always use the proper tools!


Remove the passenger seat and seat from the vehicle.
In vehicles with heated seats, the connector on the seat must be removed.



2

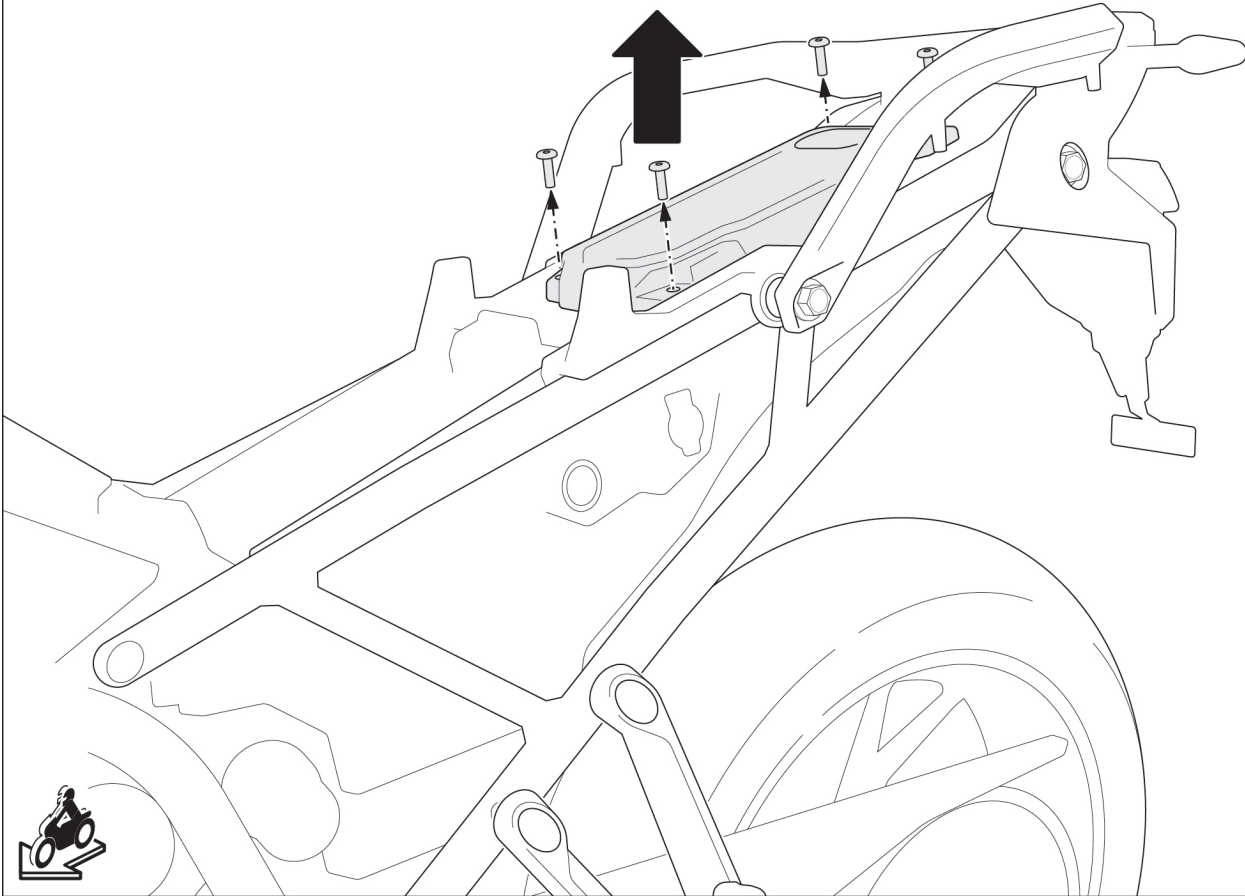

Remove the screws shown, loosen the connector, and remove the control unit with the cover from the vehicle.

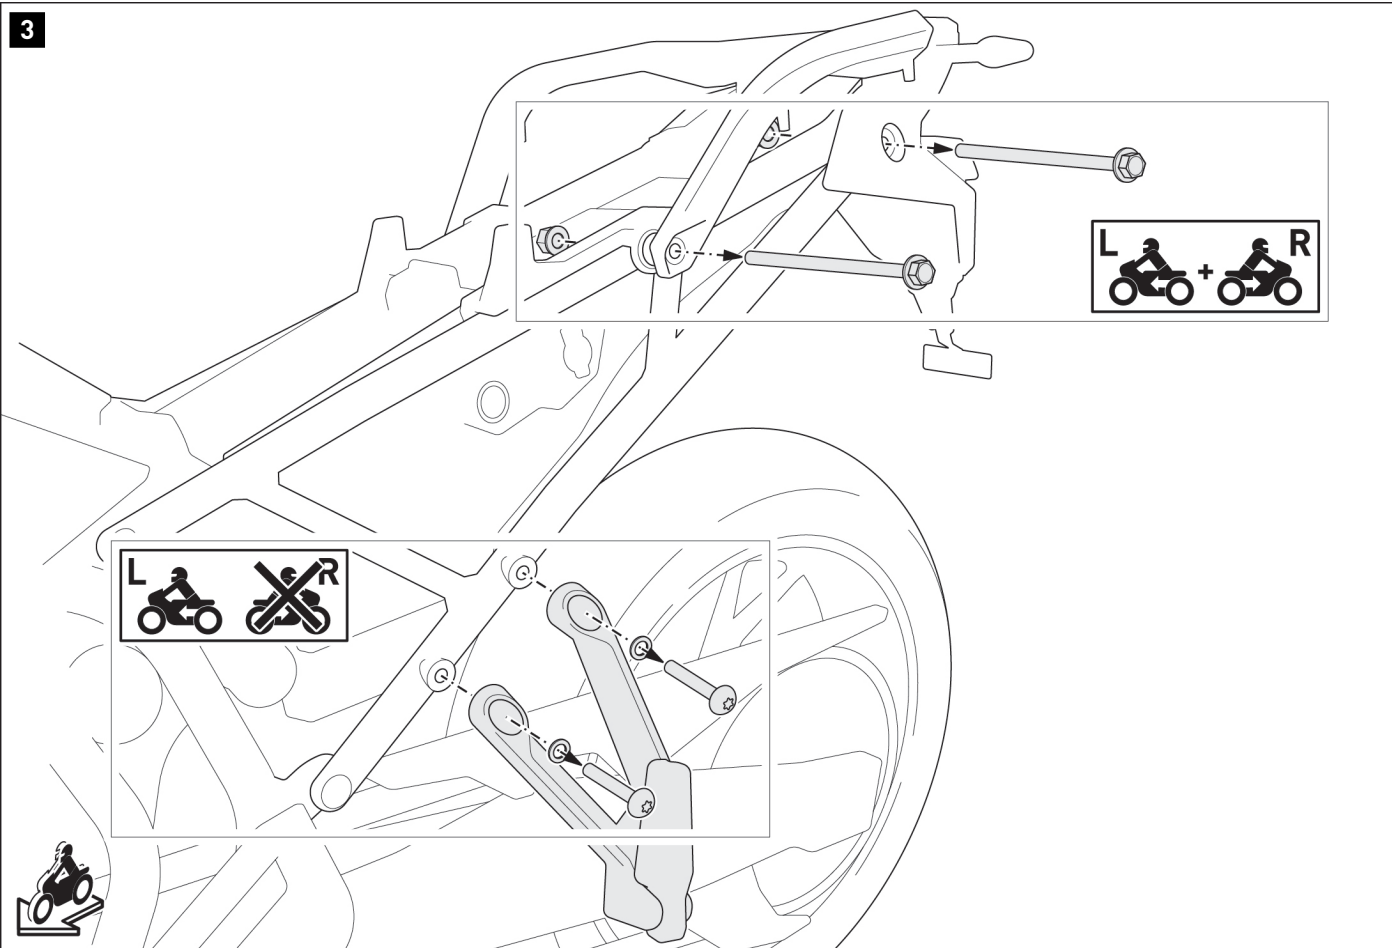

Remove the screws and nuts (as shown in drawing) from both sides of the rear of the vehicle.
Then remove the passenger footrest from the left side of the vehicle.

4

The diagram illustrates the assembly of a bicycle seatpost. The main image shows the seatpost being inserted into the frame. Two inset diagrams provide detailed views of the seatpost clamps and the seatpost itself.


Top Inset: Shows the seatpost clamps being attached to the seatpost. The clamps are labeled 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, and 11. The diagram includes a warning icon showing a person riding a bicycle with a crossed-out 'L' and a person riding a bicycle with a crossed-out 'R'.

Bottom Inset: Shows the seatpost being inserted into the frame. The seatpost is labeled 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, and 11. The diagram includes a warning icon showing a person riding a bicycle with a crossed-out 'L' and a person riding a bicycle with a crossed-out 'R'.

Right Inset: Shows the seatpost being inserted into the frame. The seatpost is labeled 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, and 11. The diagram includes a warning icon showing a person riding a bicycle with a crossed-out 'L' and a person riding a bicycle with a crossed-out 'R'.

⚠ WARNING: Use a liquid threadlocker!
Do not tighten the screws yet.








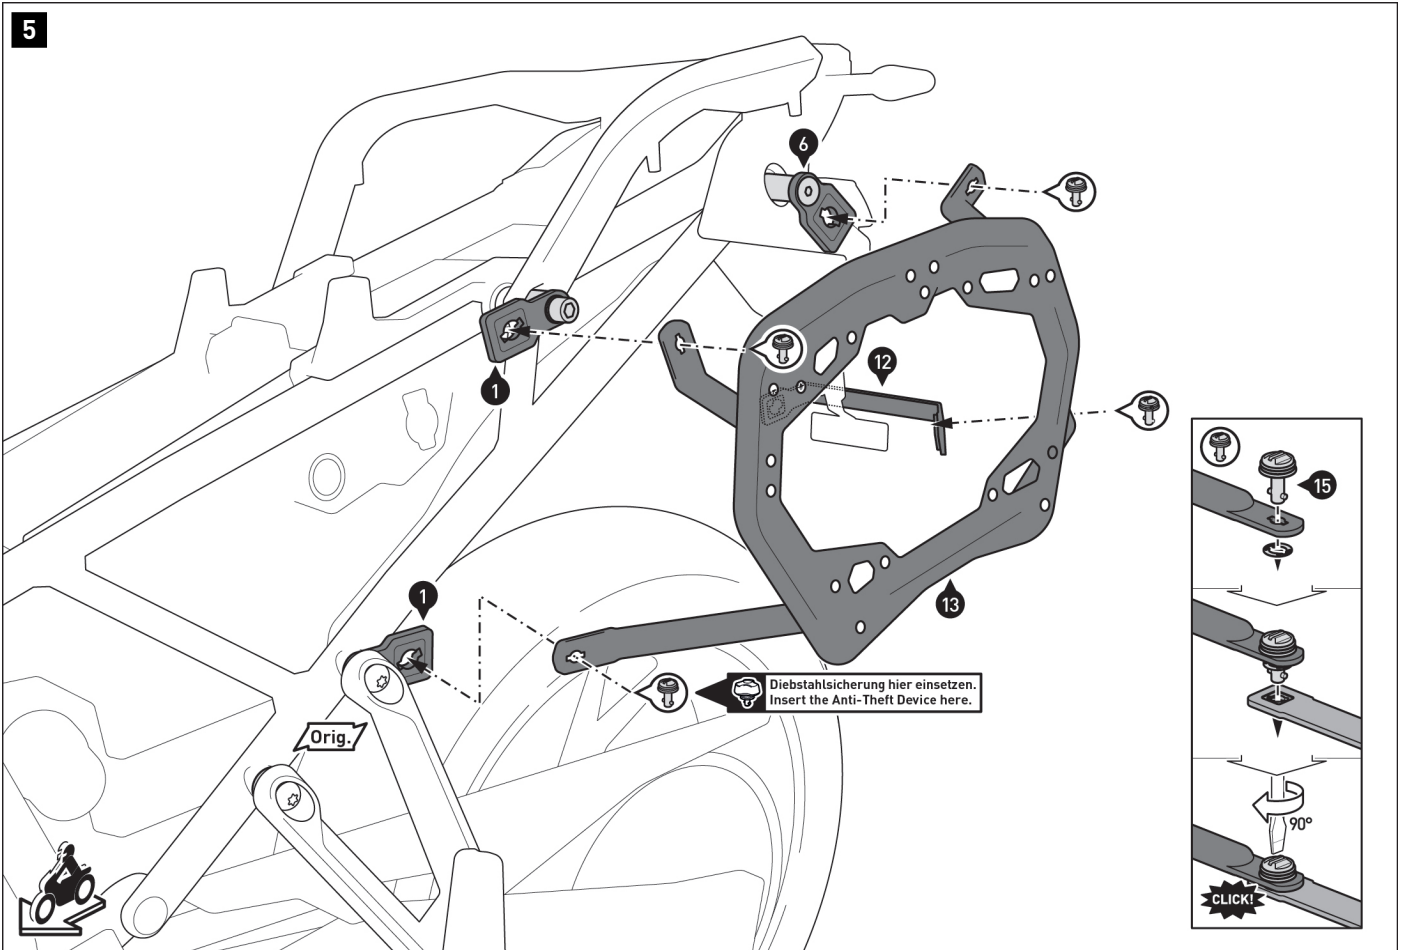


⚠ NOTE: The SW-MOTECH anti-theft protection devices are available separately; mount the anti-theft protection devices on both sides at the marked position.

Connect the side carriers (13) and (14) with the quick-release fasteners (15) to fastening straps (1), (6), and (10) as well as to the crossbar (12). Secure the quick-release fasteners using the lock washers.

When all components are loosely attached, tighten all screws as specified in the mounting instructions. Tighten the original (Orig.) screws according to the manufacturer's instructions.

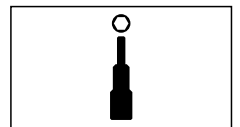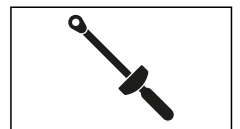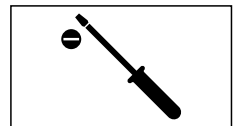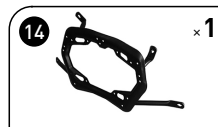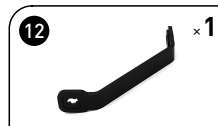

6

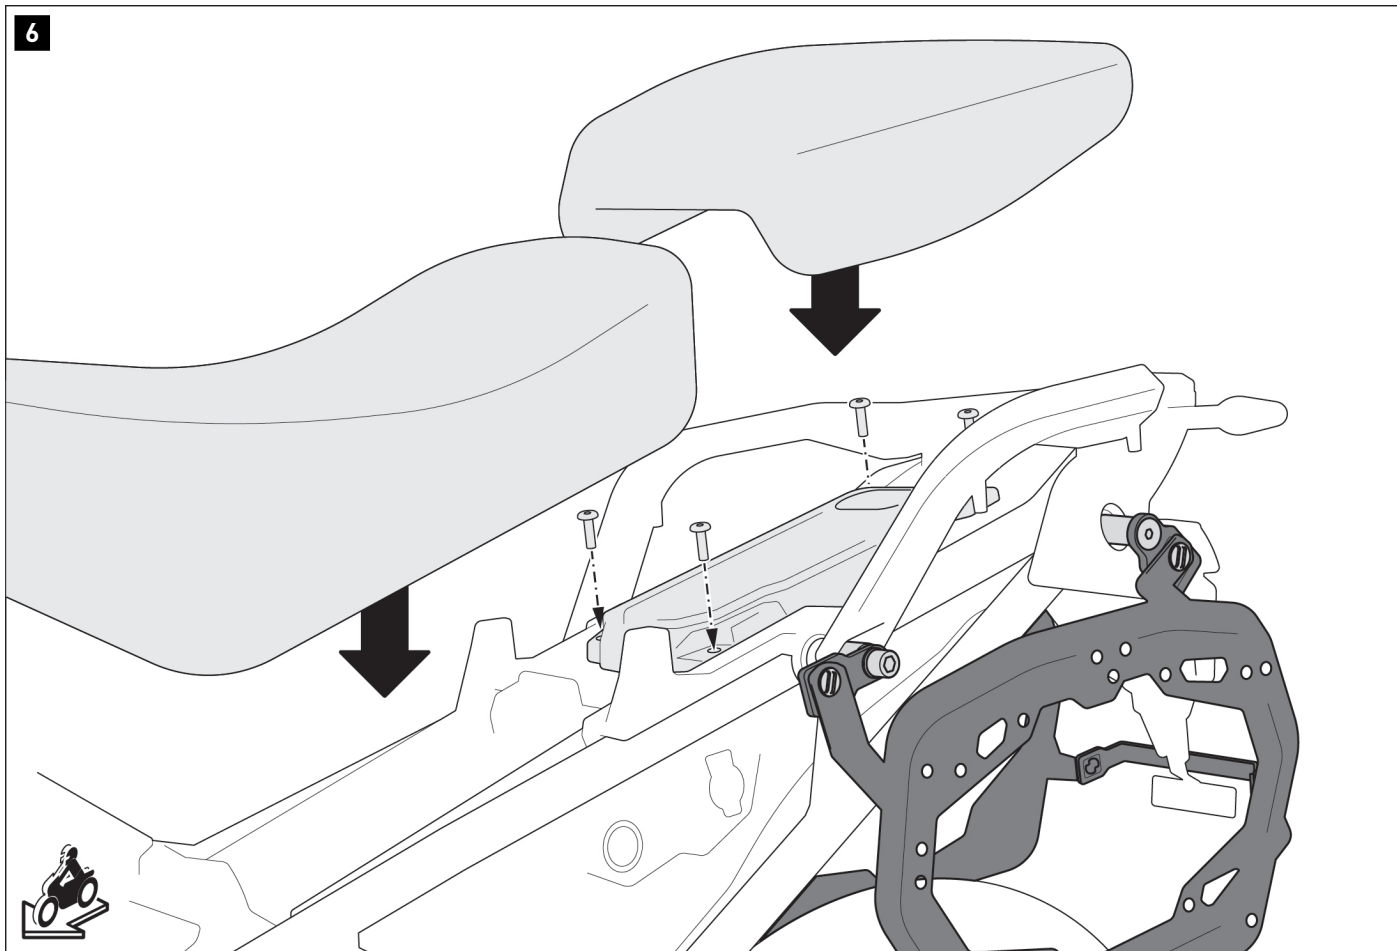

Connect the control unit to the vehicle electrical system, and screw the cover onto the vehicle.
Tighten the original (Orig.) screws according to the manufacturer's instructions.

Reattach the seat and passenger seat to the vehicle.

PRODUCT-SPECIFIC NOTES

⚠ DANGER: The specified maximum load includes the weight of the carrier adapter kit/luggage and adapter kit! The maximum vehicle load capacity specified by the vehicle manufacturer is applicable!

 ≤ 12.5KG (≤ 27.5 lbs)	 ≤ 130 km/h (≤ 80 mph)
---	---

⚠ NOTE: The side carriers have been designed exclusively for use with SW-MOTECH adapter kits.

⚠ NOTE: Dismantle the side carriers when riding without luggage. Always use the side carriers in pairs.

⚠ WARNING: Ensure that the cases are NOT in the exhaust gas flow after mounting them on the vehicle! Risk of burns!

⚠ NOTE: Ensure you adhere to all country-specific regulations regarding the registration and operation of your vehicle as well as the applicable TÜV (German Association for Technical Inspection) regulations. After assembly, parts that are subject to registration should be entered into the vehicle documents by your test center.